

HAND-HELD CONFETTI CANNON DIRECTIONS



The hand-held confetti cannon requires 2x CO2 cartridges to operate. DO NOT try to operate with only one cartridge. A 16 g cartridge is ideal although a smaller cartridge can be used but the confetti/streamers will not project as much, providing a less impressive effect.

Directions:

1. Insert confetti and/or streamers into the cannon, not too tightly and not too loosely. Tamp the confetti down by tapping the unit gently on a table or other surface; don't use a stick to push the confetti down tightly.
2. In order to get a nice "bang" and to shoot them farther when the confetti/streamers are released, put some of the paper tape provided* across the top. A suggested pattern is to put two pieces across in the same direction, two more pieces on top in the opposite direction, and then one strip of tape around the top of the cannon to hold the others down. The confetti and streamers will shoot through, ripping the tape away.
3. The lever can be flush with the two cartridge holes OR extended all the way back when you insert the cartridges.
4. Screw the cartridges into the holes (they will not be activated until the bottoms of the cartridges are pierced).
5. To activate the cannon, determine where you are going to position the cannon to shoot the confetti/streamers out (NEVER in close range of someone) and flip the lever slowly (either way depending where you had the lever in the first place in #1). This action will move the parts that pierce the bottoms up and into the cartridges. (NOTE: before inserting the cartridges, move the lever gently back and forth and see at what point the parts come up that will pierce the cartridges so you know exactly at what point this will occur).

**additional charges will apply should the tape not be returned*